

dreamclick plank replacement

BERRY  ALLOC

Version: 18/05/2020




1

Adjust circular saw to the depth of the LVT board and cut the plank lengthwise along its center axis;



2

Carefully make radial cuts from the central cut to the 4 corners of the plank, making sure not to cut or otherwise damage the adjoining boards;

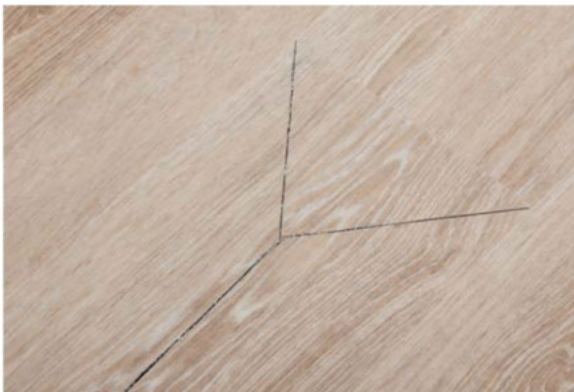

3




4

Pry the first plank section loose by inserting a putty knife in the cut running down the center of the plank.

vinyl planks.

dreamclick plank replacement

BERRY  ALLOC



5

Gently unclick the first plank section from the adjoining planks;



6

Remove the other sections of the plank by unclicking them;



7




8

Remove the tabs on both long sides of the replacement plank;
Leave the tabs on the short sides;

vinyl planks.

dreamclick plank replacement

BERRY  ALLOC



9



10

Go back to the area where you removed the plank;
Apply glue on the tabs now visible along both the
long and the short sides;



11




12

Insert the replacement plank at the short end by
clicking it into the tabs of the plank already on the floor;

vinyl planks.


dreamclick plank replacement

BERRY  ALLOC



13

Fit the plank into the tabs at the other short end of the opening created by flexing it into place;

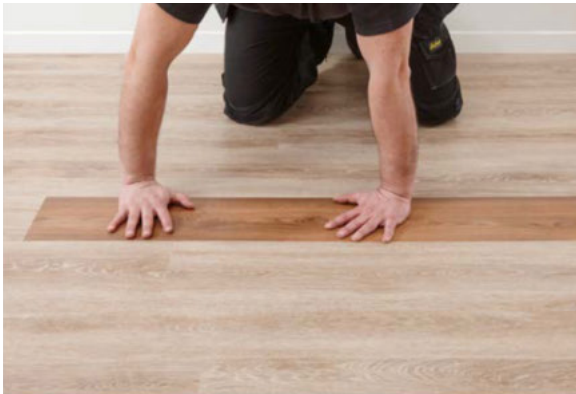


14

Push the replacement plank all the way down;



15

Place a heavy weight on the newly inserted plank and allow to cure undisturbed for 24 hours;

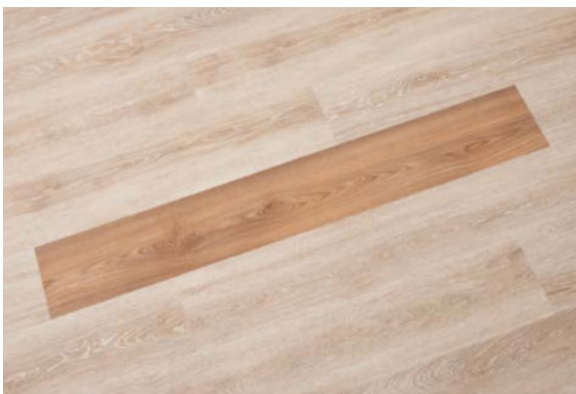

16

The end result.

vinyl planks.